

# Toll Free: 1-888-865-6888 Tel: 510-226-8368 Fax: 510-226-8968 Email: sales@RackmountMart.com

# User Manual Rack Mount Industrial Display Drawer



19 inch

**Options :** 

- Composite Video input
- HDMI / Display port input
- Touchscreen / DC power
- 3G / HD / SD-SDI broadcasting grade input
- AR Hardness glass

#### Legal Information

Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. We are not liable for any injury or loss that results from the use of this equipment.

#### Safety Instructions

# Please read all of these instructions carefully before you use the device. Save this manual for future reference.

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 40° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing damage to other equipment or injury to persons nearby.
- When the equipment is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labeled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent being damaged by transient over-voltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, fire or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equipment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.

#### What the warranty does not cover

- Any product, on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:
  - Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - $\hfill\square$  Repair or attempted repair by anyone not authorized by us.
  - □ Any damage of the product due to shipment.
  - □ Removal or installation of the product.
  - $\hfill\square$  Causes external to the product, such as electric power fluctuation or failure.
  - $\hfill\square$  Use of supplies or parts not meeting our specifications.
  - $\Box$  Normal wear and tear.
  - $\hfill\square$  Any other causes which does not relate to a product defect.
- Removal, installation, and set-up service charges.

#### **Regulatory Notices Federal Communications Commission (FCC)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

# Contents

## < Part. 1 >

1.1	Package Content	P.1
1.2	Structure Diagram & Dimension	P.1 - 2
1.3	Installation	P.3 - 4

# < Part. 2 > Specifications / OSD

2.1	Product Specifications	P.5 - 6
2.2	On-screen Display Operation ( OSD )	P.7

# < Part. 3 > Options

3.1	Touchscreen : Resistive, Capacitive	P.8
3.2	DC power	P.8

## **Before Installation**

- It is very important to mount the equipment in a suitable cabinet or on a stable surface.
- Make sure the place has a good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.

## Unpacking

The equipment comes with the standard parts shown in package content. Check and make sure they are included and in good condition. If anything is missing, or damaged, contact the supplier immediately.

## How To Clean Your LCD Monitor

# A Caution :

- To avoid the risk of electric shock, make sure your hands are dry before unplugging your monitor from or plugging your monitor into an electrical outlet.
- When you clean your monitor, do not press down on the LCD screen. Pressing down on the screen can scratch or damage your display. Pressure damage is not covered under warranty.
- Use only cleansers made specifically for cleaning monitors and monitor screens. Cleansers not made to clean monitors and monitor screens can scratch the LCD display or strip off the finish.
- Do not spray any kind of liquid directly onto the screen or case of your monitor. Spraying liquids directly onto the screen or case can cause damage which is not covered under warranty.
- Do not use paper towels or abrasive pads to clean your monitor. Using an abrasive pad or any wood based paper product such as paper towels can scratch your LCD screen.

## **Cleaning Your Monitor**

To clean your LCD safely, please follow these steps :

- ① Disconnect the power cord.
- ② Gently wipe the surface using a clean, dry microfiber cloth. Use as little pressure as possible.

## **Cleaning Tough Marks and Smudges**

To remove tough marks and smudges, please follow these steps :

- ① Disconnect the power cord.
- ② Spray a small amount of non-abrasive cleanser on a microfiber cloth.

Caution : Do not spray or apply any liquids directly onto the monitor. Always apply the solution to your microfiber cloth first, not directly on the parts you are cleaning.

- ③ Gently wipe the surface. Use as little pressure as possible.
- ④ Wait until your monitor is completely dry before plugging it in and powering it up.


# < Part 1 > < 1.1 > Package Content



#### 19" Monitor X 1


- 1.8 M VGA cable X 1
- 1.8 M DVI cable X 1
- 1.8 M Audio cable X 1
- Power cord X1

# < 1.2 > Structure Diagram

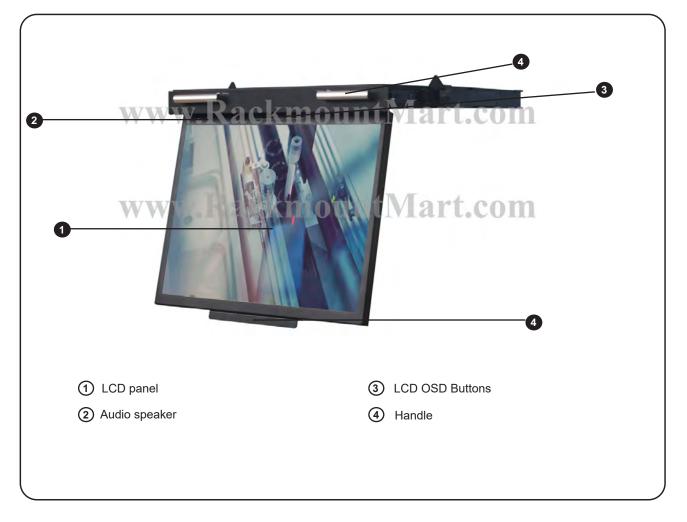


## < 1.2 > Dimension-19 inch
 
#### **Front View**




#### Side View

 UNIT : mm 1mm = 0.03937 inch




#### Ton View

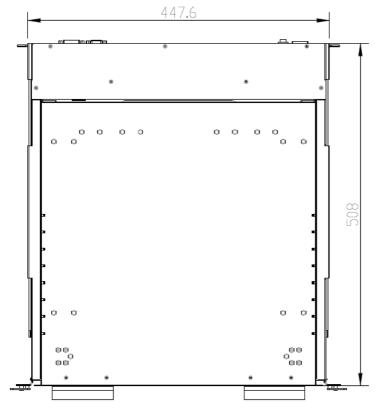


Model	Product Dimension (W x D x H)	Net Weight
LCD1U19-020	448 x 508 x 44 mm	17.5 kg

The weight is only for the pure models. It varies with accessories & options such as SDI, HDMI, audio, touchscreen & DC power.

## < 1.3 > Installation

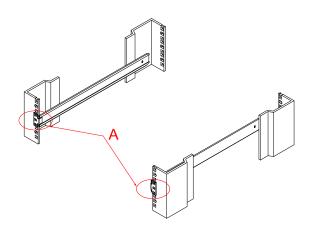



Back View step 1. rear mounting bracket, screw M6\*6pcs

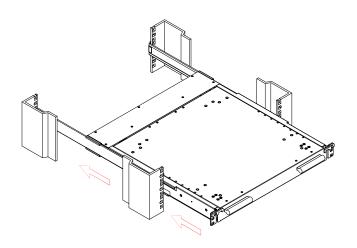

**Front View** step 2. Insert the left and right rear mounting brackets into the display drawer

Front View step 3. - screw M6 \* 4pcs - unlock locker C

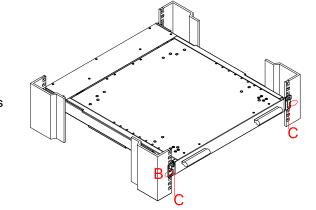


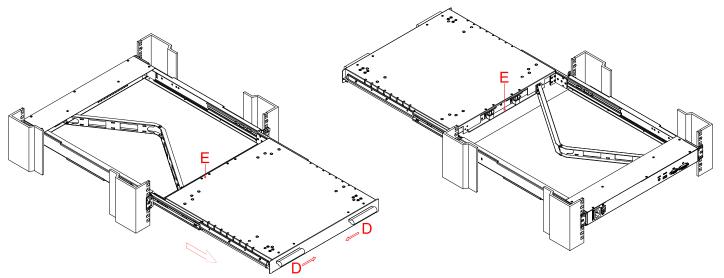



**Front View** 

**Back View** 

 step 4. - Unlock locker D and fully slide out the display - Hold bracket E to flip down the display

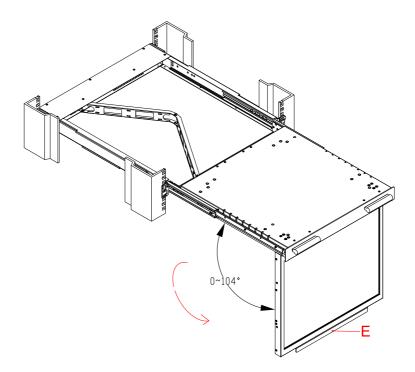



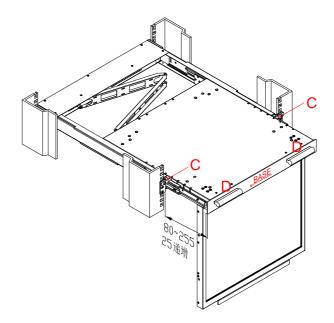

## Front View

step 6. Hold handle D and push the display to suitable position and stale the rails by locker C  $\,$ 

# < Part 2 > < 2.1 > Product Specifications

LCD	Panel Size ( diagonal )	19"
Panel	Display pixel ( dots x lines )	1280 x 1024
	Brightness ( typ. )	350
	Contrast Ratio ( typ. )	1000:1
	Color	16.7M
	Viewing Angle ( H/V )	170/160
	Response Time ( ms )	5
	Backlight Type	LED

Video	Digital	HDMI (option)	HDMI 1.1, CEA-861-D
Connectivity		DVI	DVI-D, TMDS single link
	Analog	VGA	Analog 0.7Vp-p
	Plug & Play	DVI / VGA	VESA EDID structure 1.3
	Synchronization	VGA	Separate, Composite & SOG

Audio	Audio Input	Connector	3.5mm stereo jack
Connectivity		Impedance / Power level	30kΩ / 750mV
	Speaker Output	Power	2 x 2W

Power	Power Supply	Range	Auto-sensing 100 to 240VAC, 50 / 60Hz
	DC Power	Range	9~36V DC

Regulatory	Safety	FCC & CE certified
	Environmental	RoHS2 & REACH compliant

Environmental Conditions	Operating	Temperature	0 to 50°C degree
Conditions		Humidity	5~95%, non-condensing
	Storage	Temperature	-20 to 60°C degree
		Humidity	5~95%, non-condensing
		Shock	15G/Peak (11ms duration)
		Vibration	5~500Hz 1G RMS random

Applicable	DVI-D / VGA Input	PC Signal	1280 x 1024 x 60 / 75Hz
Format			1280 x 960 x 60Hz
			1280 x 768 x 60 / 75Hz
			1152 x 864 x 75Hz
			1024 x 768 x 60 / 70 / 75Hz
			848 x 480 x 60Hz
			800 x 600 x 60 / 72 / 75Hz
			720 x 400 x 70Hz
			640 x 480 x 60 / 72 / 75Hz
			640 x 400 x 70Hz
			640 x 350 x 70Hz

# < 2.2 > On-screen Display Operation ( OSD )

#### **OSD** Control buttons

LCD OSD can establish and setup LCD display. Setup instructions of four buttons are as follows:

Button	Functions			
Power	Turn on or off the LCD Display			
Menu	Activate OSD menu, select a menu and press MENU key to confirm the			
Meria	selection and enter the submenu.			
	Press this key to increase setting or scroll up the menu bar			
▼	Press this key to Decrease setting or scroll down the menu bar			
Auto	press the auto key to adjust screen display position			
Source	press to select video source			



#### **USB Touchscreen Specification**

Model	Resistive	Capacitive
Technology	5-Wire Resistive	Capacitive
Touch Point	Single	Single
Method	Stylus or Finger	Finger
Activation Force	≤ 50g / Stylus=R0.8	≤ 50g
Durability	10 million touches	300 million touches
Response Time	15 ms	20 ms
Optical Transmittance	80% ± 3%	87% ±2%
Surface Hardness	3Н	9Н
Haze	8% ± 3%	7%
Glass	3.2 ±0.2 mm	2.8 mm ±10%
Connector	USB Type A	
Compatibility	Windows 7 / XP / Vista, Linux	

■ USB touchscreen package includes 2 x 1.8 M USB cable

- For detailed information, please refer to the attached CD disc
- As the touchscreen unit is not made of toughened glass, please handle it carefully

# < 3.2 > Options : DC power



Model	12/24V	
Input rating		
Input voltage:	12/24-Volt	
Input range:	9-36 V	
Output rating		
Output voltage:	12-Volt	
Output current:	8 A	
Efficiency	80%	

The company reserves the right to modify product specifications without prior notice and assumes no responsibility for any error which may appear in this publication.

All brand names, logo and registered trademarks are properties of their respective owners.

Copyright 2022 Synergy Global Technology Inc. All rights reserved.